



# ZIPF LOCK COMPANY

## MODERNIZATION KITS

### **Kwikset**

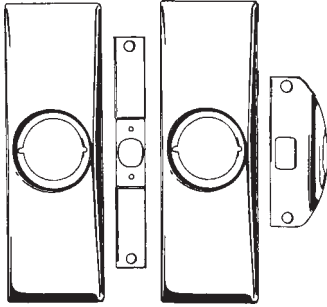


**KW-214 CP US-3**  
Large Modernization Kit. 3-1/2" x 10-1/2". Includes: 2 large trim plates, latch & strike plate.

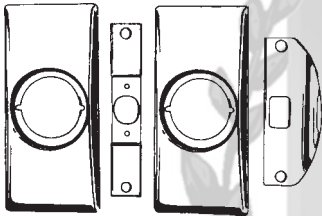

**KW-215 CP US-3**  
Small Modernization Kit. 7-1/4" x 3-3/8". Includes: 2 small trim plates, (KW-249 below) latch & strike plate.

### **AMES**

**DEADBOLTS & KNOB LOCKS FIRMLY ANCHORED IN HOLLOW METAL DOORS USING THE AMES DOOR & LOCK SUPPORTS**

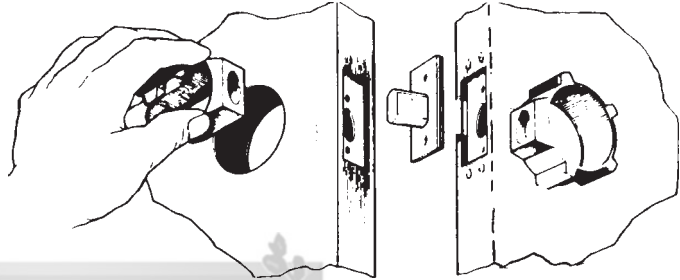

**Stock No. Description**  
**ADLS** For 1-3/4" doors

**BOLT CONE** holds and centers deadbolt or latch bolt — eliminates bolt wobble and loose or broken faceplates screws.

**LOCK SUPPORT** serves as dust cover to maintain clean, free working lock.

**BOLT CONE & PERIMETER LUGS** support door when lock is securely tightened on door.

**DEADBOLTS** which can be used in 2-1/8" holes: Schlage B600 Series, Corbin/Russwin, Kwikset, Arrow, Sargent, Weslock, Schlage 400 Series, and Master with mounting plates.

**FACE PLATE BRACKET** installed by locksmith. Not used with drive-in bolt.

**SIMPLE INSTALLATION.** Fold & insert into 2-1/8" hole. PATIENT applied for.



**"CELEBRATING 100 YEARS IN 2008"**

©ZIPF LOCK COMPANY

**457** v1  
(PL-43)

**"Your warehouse around the corner"**